BUNN®

CW-APS BREWING & CLEANING INSTRUCTIONS

BREWING



1. Insert a BUNN® filter into the funnel.



2. Pour in fresh coffee. Shake funnel gently to level grounds.



3. Slide funnel into the funnel rails of the brewer.



4. Place an empty Air Pot under the funnel.



5. Open the flip lid and pour one pitcher of tap water into the opening on top of the brewer.




6. When brewing is complete, discard the grounds and filter.



7. Holding time - discard after 60 minutes.

CLEANING

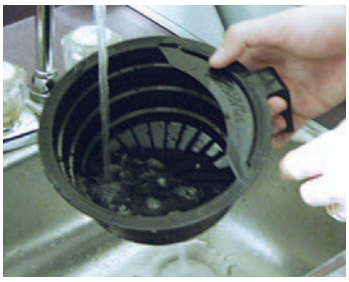

1. Clean and sanitize the funnel.



2. Use a clean damp cloth rinsed in mild, non-abrasive detergent to clean the sprayhead panel.



3. Remove the sprayhead.



4. Clean mineral deposits and rinse. Make sure all holes are open.



5. With the sprayhead removed, insert a deliming spring into the sprayhead tube until approximately two inches of the spring remain visible. Saw back and forth five or six times to loosen any lime deposits.



6. Flush the tube by running a brew cycle using an empty funnel and Airpot. When the cycle is completed, replace the sprayhead.



7. Use a clean damp cloth rinsed in mild, non-abrasive detergent to clean all outer surfaces.

42054.0000A 04/09 ©2009 Bunn-O-Matic Corporation

BUNN®

CW-APS PERCOLACIÓN *Y* LIMPIEZA

PERCOLACIÓN



1. Introduzca un filtro BUNN® en el embudo.



2. Vierta café fresco Sacuda suavemente el embudo para nivelar el café molido.



3. Deslice el embudo en los rieles de la cafetera.



4. Ponga una jarra térmica vacía debajo del embudo.



5. Abra la tapa superior y vierta una jarra de agua del grifo en la abertura de la cafetera.




6. Cuando termine de percolar el café, deseche el café molido y el filtro.



7. Tiempo de retención – Deseche el café después de 60 minutos.

LIMPIEZA

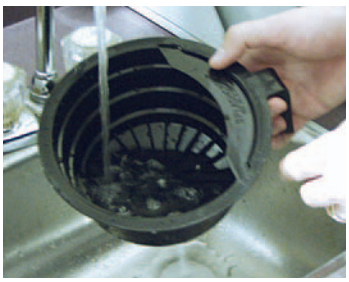


1. Limpie e higienice el embudo.



2. Use un paño húmedo limpio enjuagado en detergente suave no abrasivo para limpiar el panel del cabezal rociador.



3. Retire el cabezal rociador.

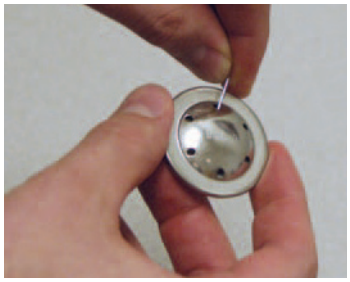

4. Limpie todos los depósitos minerales y enjuague. Asegúrese que todos los orificios estén abiertos.



5. Con el cabezal rociador retirado, inserte un resorte de descalcificación en el tubo del mismo hasta que queden visibles aproximadamente 50 mm (2 pulgadas) del resorte. Mueva el resorte en ambos sentidos cinco o seis veces para aflojar los depósitos de calcio.



6. Lave el tubo ejecutando un ciclo de percolación con el embudo vacío y una jarra térmica. Cuando termine el ciclo, vuelva a colocar el cabezal rociador.



7. Use un paño húmedo limpio enjuagado en detergente suave no abrasivo para limpiar todas las superficies exteriores.